


STEP 3-6 WILL BE THE SAME AS STEP 2. THIS WILL DEPEND ON THE SIZE OF HEATER. THIS WILL BE TOLD BY THE AMOUNT OF CONTACTORS FITTED. 2=2STEP, 3=3STEP

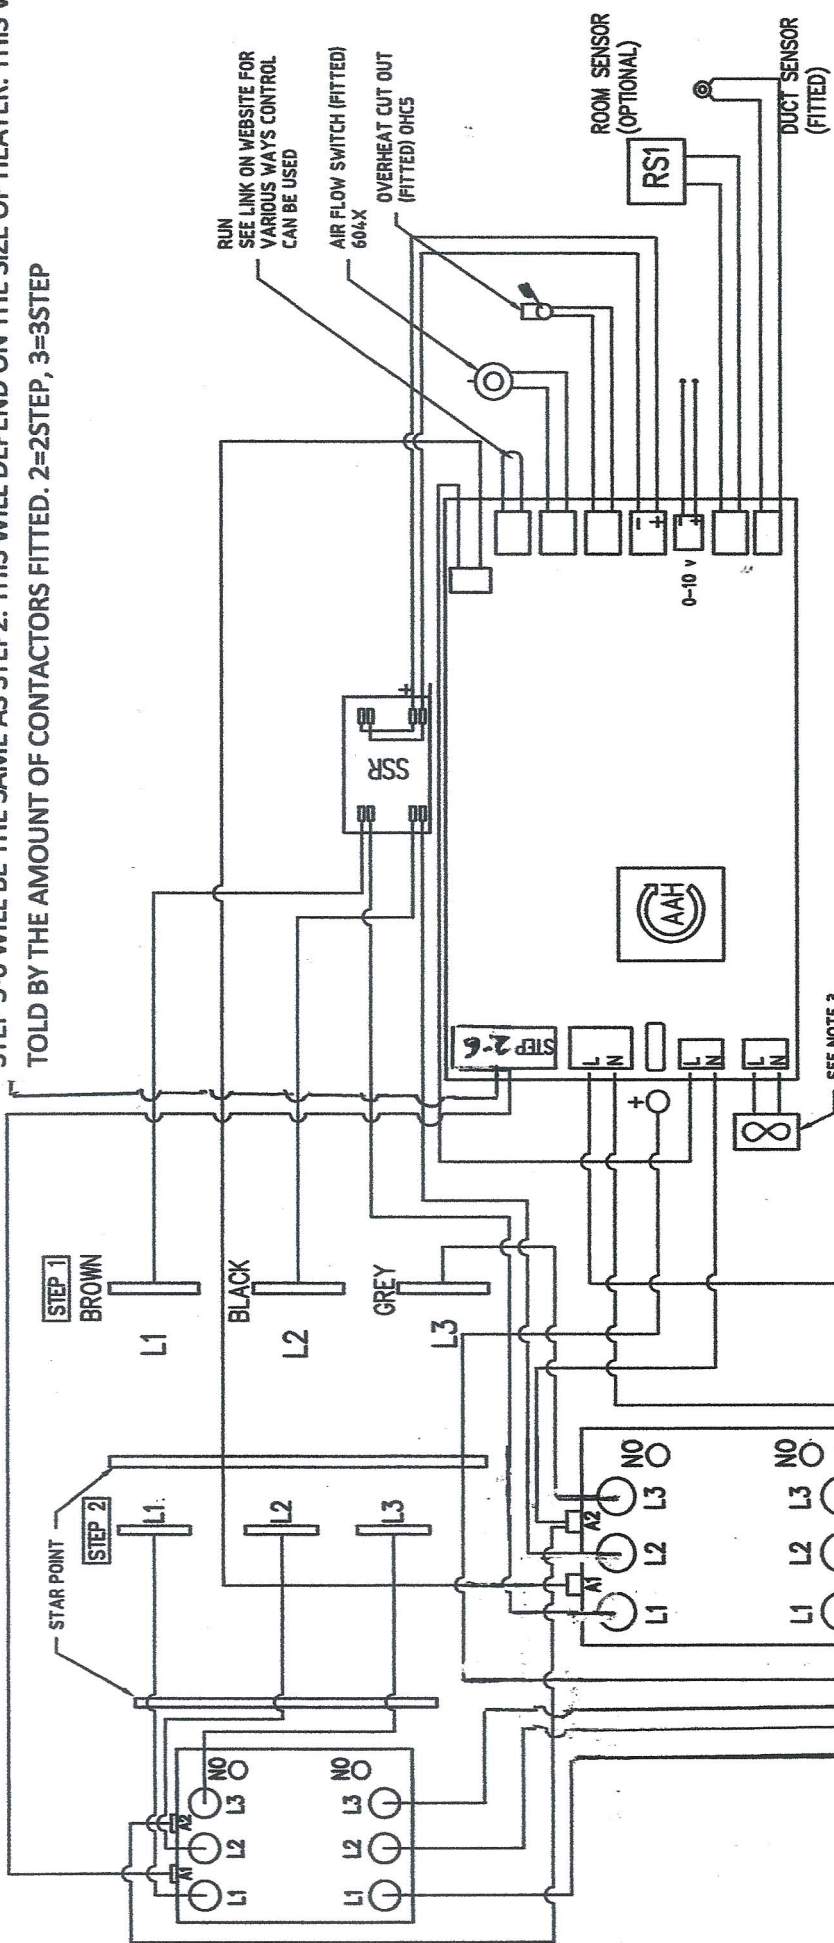

NOTES :

- 1) THE AAH/8 IS STAR POINT BUT MUST HAVE A NEUTRAL SUPPLY FOR CONTROL
- 2) CABLE SIZE WILL DEPEND ON THE POWER OF THE HEATER
- 3) OPTIONAL FAN SUPPLY (MAX 650W @ 230V) TEMPERATURE CONTROLLED AND CONTINUOUS RUN WITH FAN RUN ON
SEE LINK FOR CONTROL OF 3~ FAN
- 4) SEE WEBSITE UNDER DOWNLOADS FOR HEATING & VENTILATION OPTION

AAH ALL AROUND HEATING PRODUCTS LTD

WIRING DRAWING FOR AAH/8 SSR CONTROL 400V 3 PHASE - 2 - 6STEP